


600/700 Series Temp Sensor Replacement


TURN OFF POWER

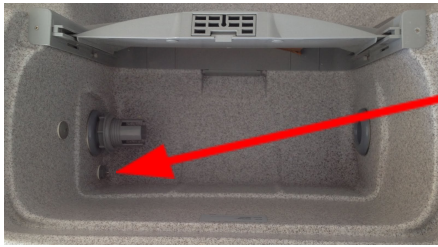

Locate temp sensor.


Remove front panel to reveal equipment compartment.
Follow wire leaving back of temp sensor into control box.

Remove control box front door. Locate board.

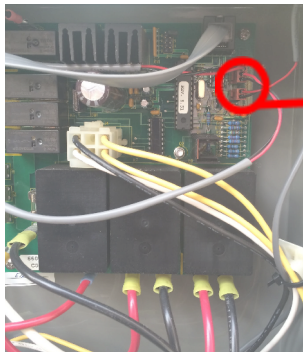


Locate and unplug sensor harness.

Use something small to push down and release the wires from the harness, gently pull on the individual wires and they will slide out. A small knife, jeweler screwdriver, or even an opened paper clip will work.

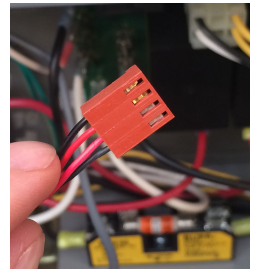

Unthread temp sensor and remove.
Install new sensor and tighten until the oring *starts* to bulge. Do not overtighten!

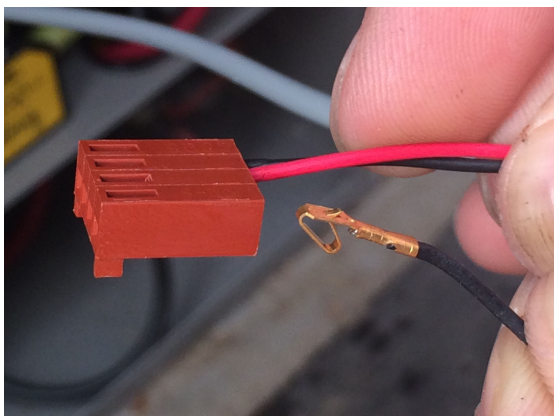

To reinstall wires, slide "finger" into harness with the finger curled down.

Confirm the tines are undamaged and slightly raised to catch in the harness window.

