


VIGOR™


Dimensions

NOTE: All dimensions are approximate; measure your cold plunge before making critical design or pathway decisions. Configuration and location may change without notice.

FRONT SIDE

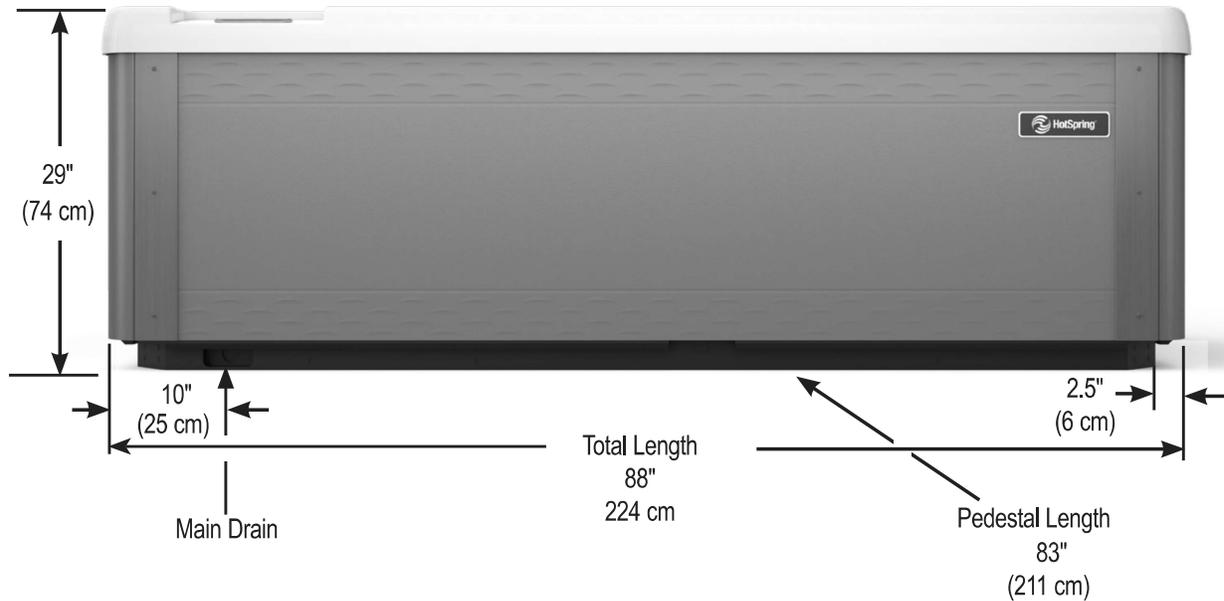

LEFT SIDE- EQUIPMENT COMPARTMENT

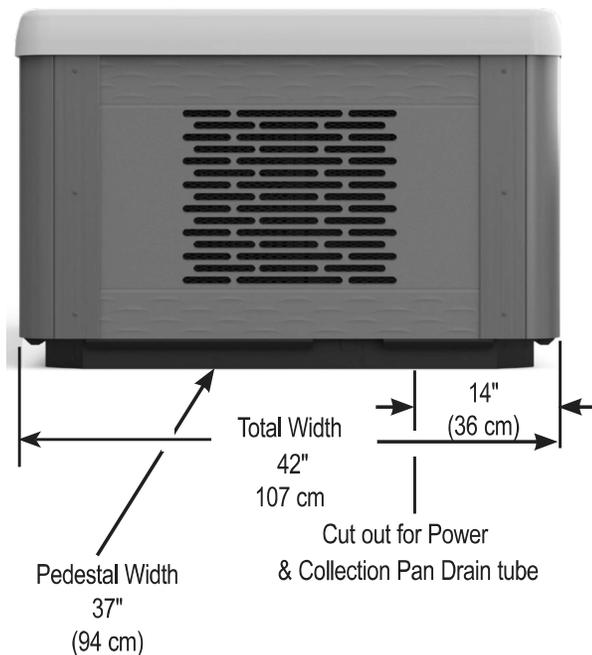

NOTE: WATKINS WELLNESS recommends that the VIGOR be installed on a minimum 4" (10.2 cm) thick reinforced concrete pad or structurally sound deck able to support the "dead weight" found in the cold plunge specification chart.

IMPORTANT: THE VIGOR MUST NOT BE SHIMMED IN ANY MANNER.